

Hinged Guard

Sliding Guard

#### Application:

Tongue operated Solenoid Interlock switches are designed to fit to the leading edge of sliding, hinged or lift off machine guards to provide positively operated switching contacts and provide a tamper resistant key mechanism.

They are designed to provide robust position interlock detection for moving guards and will remain locked until the solenoid voltage is removed from the switch. They are not suitable for machines with a running down time.


They provide robust holding up to 2000N.

### Operation:


The switch is rigidly mounted to the frame of the guard or machine. The actuator is fitted to the moving part (frame) of the guard and is aligned to the switch entry aperture. The actuator profile is designed to match a cam mechanism within the switch head and provides a positively operated not easily defeatable interlock switch. When the actuator is inserted into the switch the safety contacts will close only when power is applied to the solenoid. This will then allow the machine start circuit to be enabled. When the solenoid power is removed the safety contacts are opened and the machine circuit is broken.

### Installation:

- 1. Installation of all IDEM interlock switches must be in accordance with a risk assessment for the individual application. Installation must only be carried out by competent personnel and in accordance with these instructions.
- 2. M5 mounting bolts must be used to fix the switch and actuator, the tightening torque to ensure reliable fixing is 4.0 Nm. Tightening torque for the lid screws, conduit entry plugs and cable glands must be 1.5 Nm to ensure IP seal. Only use the correct size gland for the conduit entry and cable outside diameter. Tightening torque for the connection terminal screws is 0.7 Nm, max conductor size is 1.0 sq.mm. The switch head position can be selected by loosening the 4 head bolts and then rotating to the position required. Tightening torque for the head bolts is1.5Nm.
- 3. Always fit a mechanical stop to the guard to prevent damage to the front of the switch. Set the actuator gap to 3mm when the guard is closed and against the stop, (See Fig.A). Use alignment guides to ensure that the actuator enters the switch without interfering with the sides of the aperture. Always fit the aperture plug to the unused entry aperture to prevent debris entering the switch mechanism.

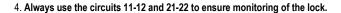


5. After installation check operation of all control circuits and the locking function. LED 1 will illuminate when power is applied to A1 and A2 (solenoid feed).

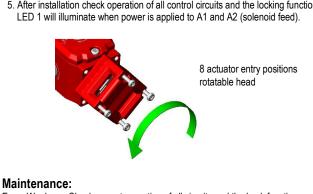


Every Week: Check correct operation of all circuits and the Lock function. If the actuator shows signs of bending or the switch head housing displays mechanical damage then remove and replace. IDEM will not accept responsibility for failure of the switch functions if the installation and maintenance requirements shown in this sheet are not implemented. These requirements form part of the product warranty.

Every 6 Months: Isolate power and remove cover. Check screw terminal tightness and check for signs of moisture ingress. Never attempt to repair any switch.

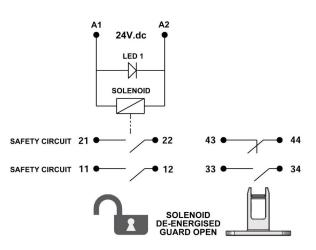

THESE INSTRUCTIONS FORM PART OF THE PRODUCT WARRANTY.

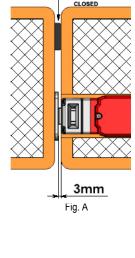

STOP

# Kobra - Tongue Switches with Guard Locking - Type KL3-SS-P2L

SAFETY CIRCUIT 21

SAFETY CIRCUIT 11

A1

A2

22

12

SOLENOID DE-ENERGISED GUARD OPEN

43

33

44

34

24V.dc

LED 1

Ð


SOLENOID


## **Internal Terminal Connections:**


- A1 0V dc A2 24V.dc
- /12 210.00
- 11-12 Safety Circuit 1 (must always be used)
- 21-22 Safety Circuit 2
- 33-34 Signal Circuit Guard (Closed when Guard is closed)
- 43-44 Signal Circuit Guard (Closed when Guard is open)

## **LED Function:**

Green Solenoid Energised

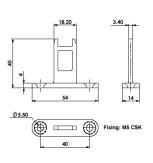

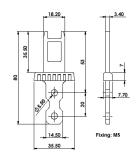

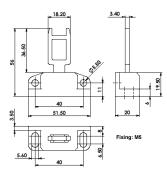


Actuator insertion:

0mm

11/12	Open		Solenoid energised
21/22	Open		Solenoid energised
33/34	Closed		Locked
43/44		Ор	en Tongue Inserted

6.0 5

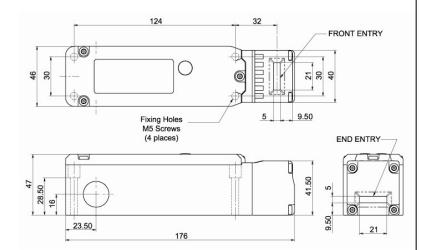

Standards: Solenoid Voltage Solenoid consumption - Turn on current Running current 11-12 Safety Contacts 21-22 Utilization Category Thermal Current (Ith) Rated Insulation Voltage Rated Impulse Withstand Volt Signal Contacts 33-34 43-44 Travel for Positive Opening Man. Actuation Frequency Actuator entry minimum radius Case Material Actuator Material **Enclosure Protection** Operating Temperature Mechanical Life Expectancy

Vibration

Conduit Entry Fixing

# Information with regard to UL 508:

Type 1 Enclosures. Use 16-12AWG copper conductors only. Intended for same polarity use and one polymeric conduit connection. Electrical Rating: A300. 48W5. Max. Switching Current / Volt / Amp: 120V. 6A. (720VA break) PF 0.38 240V. 3A. (720VA break) PF 0.38 0.3A. AC15 A300 3A. 5A 600VAC 2500VAC AC15 A300 3A. 10mm 2 cycle/sec 175mm Stainless steel 316 Stainless steel 316 IP69K -25°C to 40°C 1 x 10<sup>6</sup> Cycle min. IEC 68-2-6, 10-55Hz+1Hz, Excursion: 0.35mm, 1 octave/min M20 or 1/2" NPT (by Part Number) 4 x M5

EN1088, IEC 60947-5-1, UL508

24V dc

1.2 A.

IDEM SAFETY SWITCHES Ltd., 2 Ormside Close, Hindley Industrial Estate, Hindley Green, Wigan, WN2 4HR UK. Tel: +44 (0)1942 257070 Fax.: +44 (0)1942 257070 Fax.: +44 (0)1942 257076 IDEM (USA) 4416 Technology Drive, Fremont, CA 94538 Tel:510-445-0751 Fax:1866-431-7064 email: <a href="mailto:sales@idemsafety.com">sales@idemsafety.com</a> Web: <a href="mailto:www.idemsafety.com">www.idemsafety.com</a> <a href="mailto:www.idemsafety.com">www.idemsafety.com</a> <a href="mailto:www.idemsafety.com">www.idemsafety.com</a> <a href="mailto:www.idemsafety.com">www.idemsafety.com</a> <a href="mailto:www.idemsafety.com"/>www.idemsafety.com"/>www

Doc: 102549 May 2015