

Data Sheet Guardian Line Series



Heavy Duty Types: GLHD (Dual Head) GLHD-SS (Dual Head)



GLHR/L (Single Head) GLHR/L-SS (Single Head)



Standard Duty Types: GLS GLS-SS



Mini Duty Type: GLM GLM-SS

Using Safety Rope Emergency Stop Switches

Application:

Safety Rope Emergency Stop Switches are mounted on machines and sections of plant conveyors which cannot be protected by guards. In contrast to traditional mushroom head type Emergency Stop buttons, Safety Rope Switches can initiate the emergency command from any point along the installed rope length.

In combination with any dual channel safety monitoring controllers IDEM Safety Rope Systems can be used as emergency stop devices and monitored for up to Category PLe/Cat.4 to ISO13849-1.

Operation:

All IDEM Safety Rope Emergency Stop Switches conform to European Standard ISO13850 (EN 418) and IEC60947-5-5. They have a positive mechanical linkage between the switch contacts and the wire rope as per IEC60947-5-1. The emergency stop switches are brought into the operational condition by pre-tensioning the rope by use of a tensioner/gripper device which clamps the rope and then hooks to the switch eyebolts. Correct tension can be observed by viewing the tension indicator on the switch housing. Once tensioned the switch contact blocks can be set to the operational condition (safety contacts closed, auxiliary contacts open) by pressing a blue reset button on the switch cover.

All of the Safety Rope Switches have wire-breakage monitoring. On pulling or breakage (tension loss) of the rope, the safety contacts are positively opened and the auxiliary contacts are closed. The switches are mechanically latched and can then only be returned to the operational condition by pressing the reset button as required by ISO13850 (EN418).

Installation Guide:

1. Installation of all IDEM Safety Rope Switch systems must be in accordance with a risk assessment for the individual application. Installation must only be carried out by competent personnel and in accordance with these instructions.

2. According to ISO13850 (EN418), pulleys may only be mounted such that a complete length of the rope can be observed.

3. Rope support eyebolts must be fitted at 2.5 m. min. to 3m. max. intervals along all rope lengths between switches. The rope must be supported no more than 500mm from the Switch eyebolt or Safety Spring (if used). It is important that this first 500mm is not used as part of the active protection coverage.

4. M5 mounting bolts must be used to fix the switches. Tightening torque for mounting bolts to ensure reliable fixing is 4 Nm. Tightening torque for the lid screws, conduit entry plugs and cable glands must be 1.5 Nm to ensure IP seal. Only use the correct size gland for the conduit entry and cable outside diameter.

5. Tensioning of rope is achieved by use of IDEM tensioner/gripper assemblies.

On installation set the tension to the mid position as indicated by the markers in the viewing window of each switch. Check operation of all switches and the control circuits by pulling the rope at various locations along the active protection area and resetting each switch by depressing the Blue Reset button. Ensure each time that the switches latch off and require manual resetting by depressing the blue reset button. Increase the system tension further, if required, depending upon the checks along the active length of coverage.

If fitted with a Mushroom type E-Stop button (Red) then test and reset each switch to ensure correct function of the safety control circuits.

Typical operational condition for successful operation of the system is less than 75N. pulling force and less than 150mm deflection of rope between eyebolt supports.


6. Maintenance:

 Every Week:
 Check correct operation of system at locations along all coverage length. Check for nominal tension setting, re-tension rope if necessary.


 Every 6 Months:
 Isolate power and remove cover. Check screw terminal tightness and check for signs of moisture ingress.

Never attempt to repair any switch.

7. Recommended rope span options and fittings - (subject to an individual risk assessment for the installation):

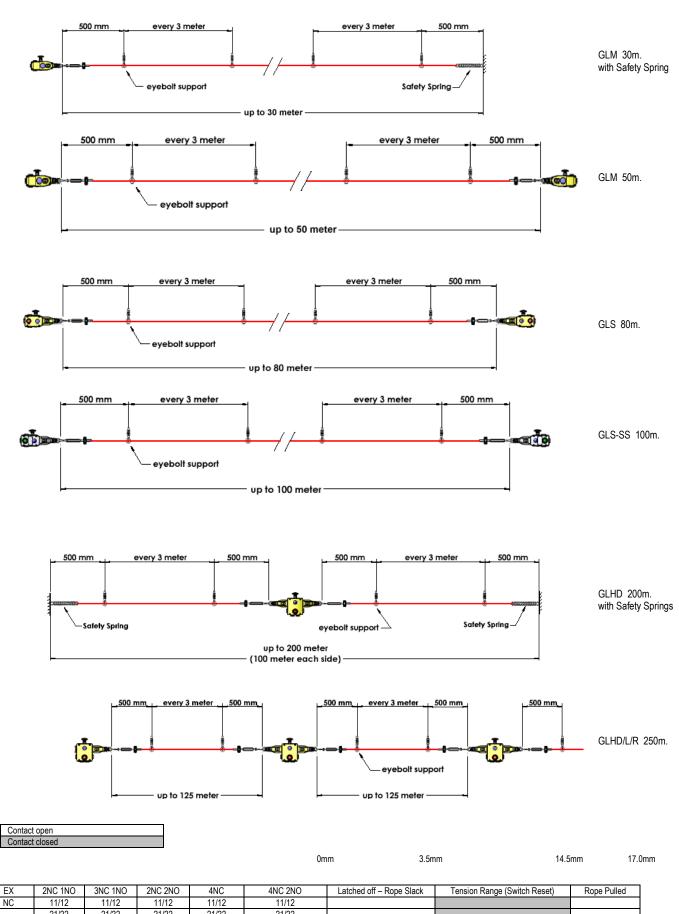


NC	11/12	11/12	11/12	11/12	11/12		
	21/22	21/22	21/22	21/22	21/22		
		31/32		31/32	41/42		
				41/42	51/52		
NO	33/34	43/44	33/34		33/34		
			43/44		63/64		

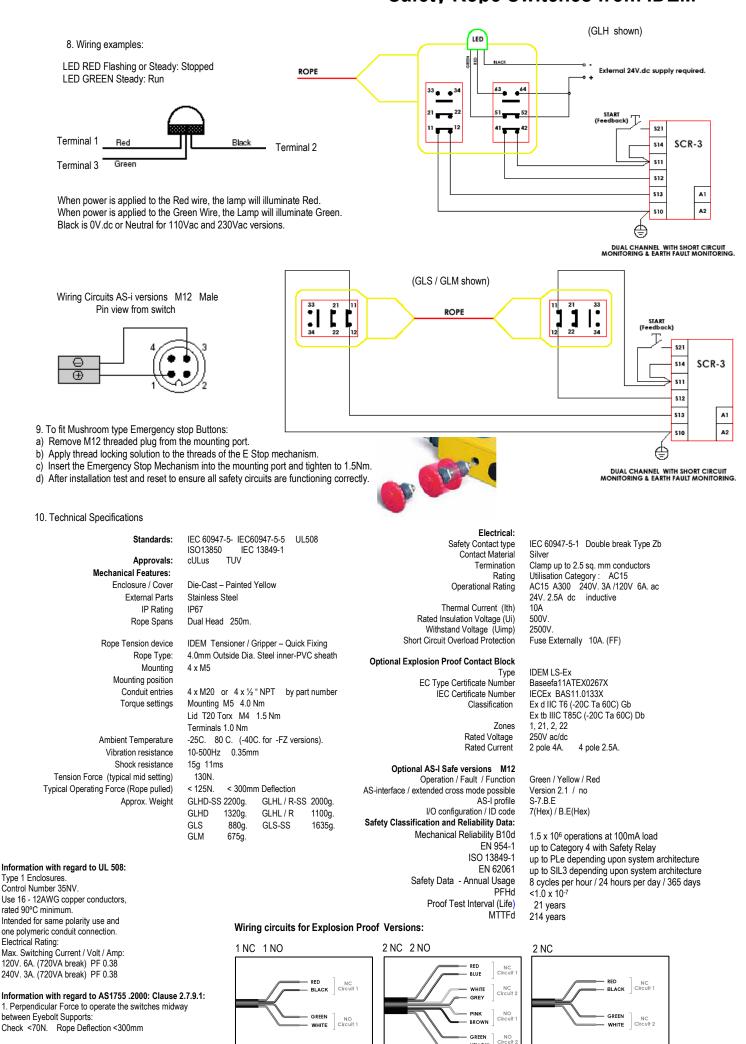

YELLOW


2. Axial Force - Direct along rope axis: <230N. (Typical 125N).

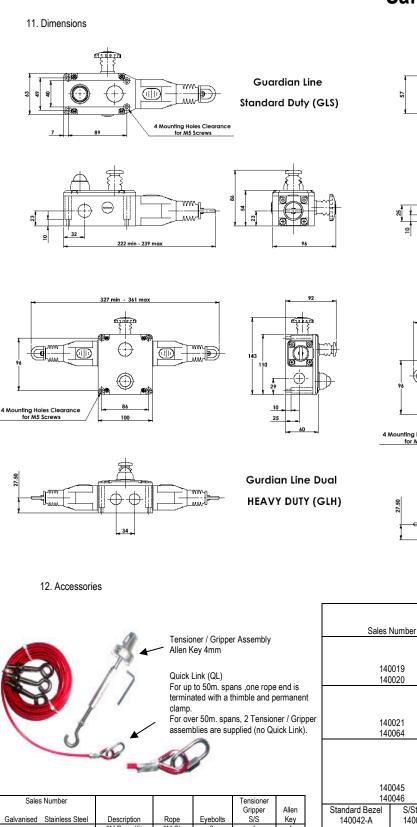


Guardian Line Mini Duty (GLM)

2 Mounting Holes Clearan for M5 Screws

  
(س





4 Mounting Holes Clearance for M5 Screws

 25



Gurdian Line Single HEAVY DUTY (GLH)

> Doc: 102524 Sept. 2013

Description Rope Tensioner / Gripper Stainless Steel Rope Tensioner / Gripper Galvanised Steel 77mm Long 40mm High Fixing Hole centres 20mm Universal Pulley Stainless Steel Universal Pulley Galvanised 84mm Long Thread length 51mm M8 x 1.25 Evebolt Stainless Steel Eyebolt Galvanised S/Steel Bezel 140042-A-SS Galvanised Description 5M Rope Kit Rope 5M QL LED Green / Flashing Red 24V.dc. 140001 140010 140042-B 140042-B-SS LED Green / Flashing Red 110-120V.ac. 10M Rope Kit 10M. QL 140002 140011 140042-C 140042-C-SS LED Green / Flashing Red 230V.ac. 5 1 140012 15M Rope Kit 15M. QL 140003 140132-AS 140132-AS-SS LED Steady Green/Steady Red 24V.dc 140004 14001 20M Rope Kit 20M. QI q LED Steady Green/Steady Red 110-120V.ac. 140132-BS 140132-BS-SS 140005 140014 30M Rope Kit 30M. QI 12 1 140132-CS 140132-CS-SS LED Steady Green/Steady Red 230V.ac 140006 140015 50M Rope Kit 50M. QL 20 140007 140008 140016 140017 80M. 100M. 80M Rope Kit 30 37 100M Rope Kit 140009 140018 125M Rope Kit 126M 45 140033 Rope only 5N 140044 E-Stop Mechanism - Standard Rope only10M 140144 E-Stop Mechanism - Stainless Steel 140036 Rope only 20M 140037 Rope only 30M 140038 Rope only 50M 140039 Rope only 80M Community 140040 140041 Rope only 100N 140043 Safety Spring 220mm long Rope only 126M